 


MODEL iP-3-AFP
 ENGLISH MANUAL PLAN
 SIZE: 102(W) x 136(H) MM
 MATERIAL: 80G WOODFREE PAPER
 PRINTING COLOR: BLACK

OPERATING INSTRUCTIONS


FINLUX

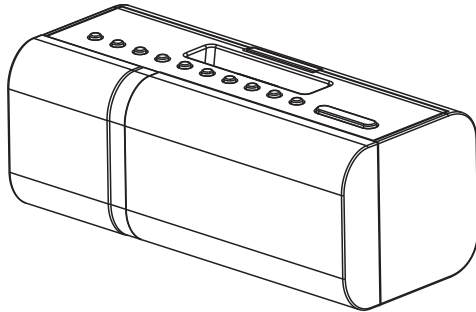


***iPod/ iPhone DOCKING HIGH FIDELITY
 SPEAKER SYSTEM
 WITH FM PLL RADIO TUNER
 AND ALARM CLOCK
 MODEL: iP-3-AFP***



	<p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p>	
<p>The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.</p>	<p>WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.</p>	<p>The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.</p>
<p>WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING LIQUIDS.</p>		
<p>NOTE: CAUTION SYMBOLS ARE PRINTED ON THE BOTTOM OF UNIT. PLEASE REFER TO INSTRUCTION MANUAL.</p>		
<p>CAUTION: GROUNDING OR POLARIZATION. THE PRECAUTIONS SHOULD BE TAKEN SO THAT THE WIDER BLADE OF THE AC PLUG MUST MATCH THE SLOT IN RECEPTACLE "WALL SOCKET".</p>		
<p>THE APPARATUS SHOULD NOT BE EXPOSED TO DRIPPING OR SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS SHOULD BE PLACED ON THE APPARATUS.</p>		
<p>THE MARKING AND RATING LABEL IS LOCATED AT BOTTOM ENCLOSURE OF THE APPARATUS.</p>		
<p>THE MAINS PLUG IS USED AS THE DISCONNECT DEVICE AND IT SHALL REMAIN READILY OPERABLE. TO BE COMPLETELY DISCONNECTED THE POWER INPUT, THE MAINS PLUG OF THE APPARATUS SHALL BE DISCONNECTED FROM THE MAINS COMPLETELY. THE MAINS PLUG SHOULD NOT BE OBSTRUCTED OR SHOULD BE EASILY ACCESSED DURING INTENDED USE.</p>		
<p>UNDER THE INFLUENCE OF ELECTROSTATIC PHENOMENON, THE PRODUCT MAY MALFUNCTION AND USER TO POWER RESET.</p>		
<p>ELECTROSTATIC DISCHARGE (ESD) PRECAUTION WHEN ELECTROSTATIC DISCHARGE (ESD) OCCURS AT THE FRONT SURFACE (WHETHER METAL OR PLASTIC) OR NEAR ANY PART OR ANY BUTTON OF THIS UNIT, OR AT THE USB PORT AND/ OR SD-CARD SLOTS (IF THEY EXIST ON THIS PRODUCT), THERE MAY BE A POSSIBILITY THAT THE PRODUCT MAY STOP OPERATION AND/ OR SHUT DOWN IMMEDIATELY. THIS IS A NORMAL CONDITION AND INTENDED TO PROTECT THE UNIT AND INTERNAL COMPONENTS AGAINST DAMAGE. IN SUCH A CASE, PLEASE RESET THE UNIT (BY DISCONNECTING AND RECONNECTING AC-POWER SOURCE) TO REVERT THE UNIT TO NORMAL OPERATION.</p>		
<p>DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.</p>		
<p>CAUTION BATTERY SHOULD NOT BE EXPOSED TO EXCESSIVE HEAT SUCH AS SUNSHINE, FIRE OR THE LIKE.</p>		

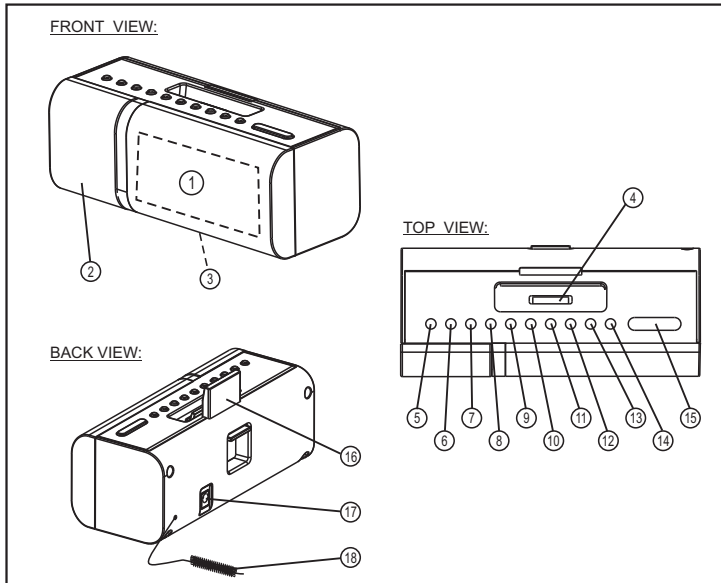 

LOCATION OF CONTROLS


- | | |
|---|--|
| 1. LED DISPLAY | 10. AL-MODE/ AL-SET KEY |
| 2. SPEAKER | 11. EQ/ SLEEP KEY |
| 3. BACK-UP BATTERY COMPARTMENT (BOTTOM OF UNIT) | 12. MEMORY KEY |
| 4. CAVITY FOR DOCK ADAPTOR | 13. VOL. - KEY |
| 5. ON/ STANDBY KEY | 14. VOL. + KEY |
| 6. PLAY/ PAUSE KEY | 15. SNOOZE/ DIMMER KEY |
| 7. FUNCTION/ CL. SET | 16. iPod/ iPhone STAND BOARD |
| 8. SEARCH - / SKIP - KEY | 17. DC JACK (DC 7V ) |
| 9. SEARCH + / SKIP + KEY | 18. FM ANTENNA WIRE |

E-3

POWER SUPPLY

AC OPERATION (EXTERNAL AC-DC POWER ADAPTOR)

 - THIS SET IS EQUIPPED WITH A "DC-JACK" CAPABLE OF ACCEPTING AC-ADAPTORS WITH A RATING OF DC = 7V, 2A, AND WITH A PLUG WITH THE FOLLOWING POLARITIES AS SHOWN (CENTER POSITIVE) :
- PLEASE USE ONLY THE SUPPLIED AC-ADAPTOR TO OPERATE THE UNIT. USE OF OTHER ADAPTORS MAY DAMAGE THE UNIT OR CAUSE IT TO MALFUNCTION.
- PLUG THE TAIL END OF THE AC-ADAPTOR INTO THE DC-JACK (SOCKET) ON THE REAR OF THE UNIT.
- INSERT THE PLUG OF THE AC-ADAPTOR INTO A WALL OUTLET WITH AC-POWER.
- PRESS THE "ON/ OFF" KEY TO SWITCH ON THE UNIT.
- THIS UNIT IS DESIGNED TO OPERATE WITHOUT EVER BEING TOTALLY POWERED "OFF". IT WILL EITHER BE "ON" OR IN "STANDBY MODE".
- IN STANDBY MODE, THE BLUE BACK-LIGHT OF THE DIGITAL DISPLAY WILL BE DIMMED BUT THE DISPLAY WILL SHOW THE CURRENT TIME (CLOCK FUNCTION).
- ANYTIME DURING STANDBY MODE, YOU CAN SWITCH "ON" THE UNIT BY PRESSING THE "ON/ OFF" KEY.
- SAVE ENERGY BY SWITCHING THE SYSTEM TO "STANDBY" MODE WHEN NOT IN USE.



BACK UP BATTERIES

- OPEN THE BATTERY DOOR AT THE BOTTOM OF UNIT.
- INSERT 2 PCS "AAA-CELL" (UM-4/LR03 TYPE) BATTERIES IN THE BATTERY COMPARTMENT.
- THESE 2 BATTERIES ARE FOR BACKUP OF THE "CLOCK" DURING BRIEF POWER OUTAGES".

DIMMER FUNCTION

 
THIS SET HAS A DIMMER FUNCTION TO ADJUST THE BRIGHTNESS LEVEL OF THE DISPLAY BACKLIGHT. SIMPLY ADJUST IT AS DESIRED BY PRESSING THE SNOOZE/ DIMMER KEY REPEATEDLY (HI-DIMMER / LOW-DIMMER / OFF.) TO REDUCE EYE STRAIN, AND TO SAVE ENERGY. THE DISPLAY BACKLIGHT WILL ALWAYS RETURN IN HI-DIMMER AFTER RESET THE UNIT.

E-4

DIGITAL CLOCK FUNCTION

- THE SET HAS A BUILT-IN DIGITAL CLOCK, WHEN THE SET IS IN "STANDBY MODE".
(THE DISPLAY WILL CONTINUOUSLY SHOW THE CURRENT TIME).

HOW TO SET CORRECT TIME:

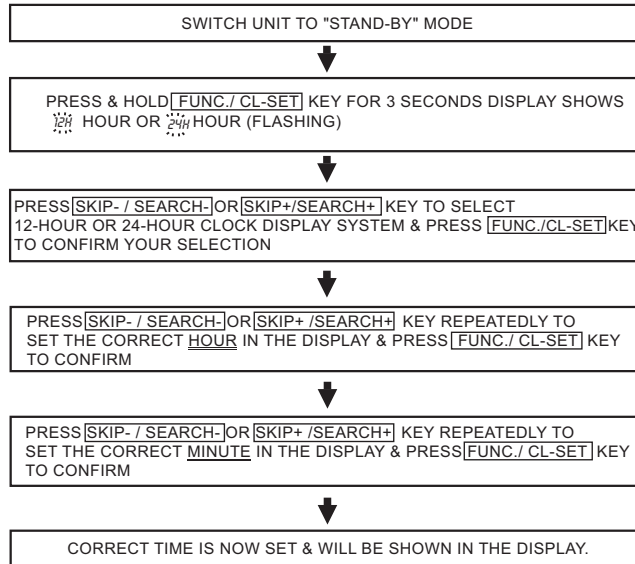

ALARM FUNCTION

 
- THIS SET IS EQUIPPED WITH 3 ALARM MODES: BUZZER, RADIO AND iPod.
BEFORE SETTING THE ALARM, MAKE SURE TO SET THE CLOCK (SEE "DIGITAL
CLOCK FUNCTION" IN THE PVIOUS SECTION) .

PREPARE FOR THE ALARM SETTINGS

PRESS THE **[ON/STANDBY]** KEY TO SWITCH ON THE SET (DISPLAY BLUE LIGHT WILL
BE "ON").

"ALARM" TIME SETTING

1. PRESS THE **[ON/STANDBY]** KEY TO PUT THE SET INTO "STANDBY" MODE .
2. PRESS AND HOLD **[AL-SET/AL-MODE]** KEY UNTIL
THE DISPLAY WILL NOW SHOW:



3. PRESS **[SKIP- / SEARCH-]** AND **[SKIP+ / SEARCH+]** KEY TO REACH THE HOUR
OF THE DESIRED WAKE UP TIME THEN PRESS **[AL-SET/AL-MODE]** KEY TO CONFIRM.
THE DISPLAY WILL NOW SHOW:



4. PRESS **[SKIP- / SEARCH-]** AND **[SKIP+ / SEARCH+]** KEY TO REACH THE
MINUTES OF THE DESIRED WAKE UP TIME, THEN PRESS THE **[AL-SET/AL-MODE]**
KEY TO CONFIRM.

5. "ALARM" MODE SETTING

NOW SELECT THE SOURCE THAT YOU WISH THE UNIT TO PLAY AT THE "WAKE UP"
TIME AS BELOW:

PRESS THE **[ON/STANDBY]** KEY TO SWITCH ON THE SET (DISPLAY BLUE LIGHT WILL
BE "ON").

1. **FOR iPod/ iPhone :** CONNECT THE iPod/ iPhone AS DESCRIBED.
SELECT THE SONG OR THE DESIRED PLAYLIST TO PLAY AT
THE "WAKE UP" TIME.
START AND PAUSE PLAYBACK OF THE SONG/PLAYLIST AT
THE POINT FROM WHICH YOU WANT PLAYBACK TO BEGIN
AT THE "WAKE UP" TIME.

FOR RADIO : TUNE IN THE DESIRED STATION.

2. ADJUST THE VOLUME LEVEL AS DESIRED BY PRESSING **[VOL. UP +]** OR **[VOL. DN -]**
KEY.

ONCE THE DESIRED SOURCE HAS BEEN READY, PRESS THE **[ON/STANDBY]** KEY TO
PUT THE SET INTO STANDBY MODE AND THEN SHORT PRESS THE **[AL-SET/AL-MODE]** KEY
REPEATEDLY TO SELECT THE SOURCE AS DESIRED.

***REMARK: AL = BUZZER ALARM / FM = RADIO / iPod= iPod/ iPhone**

6. THE ALARM TIME IS NOW FULLY PROGRAMMED AND THE ALARM SYMBOL WILL APPEAR TO INDICATE THAT THE ALARM FUNCTION IS "ACTIVE".



7. THE SET WILL NOW AUTOMATICALLY SWITCH "ON" AT THE WAKE-UP TIME AS YOU HAVE CHOSEN, AS LONG AS THE ALARM FUNCTION IS "ACTIVE".
8. TO TURN OFF THE UNIT AFTER IT HAS AUTOMATICALLY SWITCHED ON, SIMPLY PRESS THE **[ON/STANDBY]** KEY ONCE. THIS WILL SWITCH OFF THE SET BUT WILL NOT CLEAR THE ALARM SETTINGS, AND THE SET WILL SWITCH ON AGAIN AUTOMATICALLY ON THE NEXT DAY AT EXACTLY THE SAME PRESET TIME.
9. TO DEACTIVATE THE ALARM, PRESS & RELEASE THE **[AL-SET/AL-MODE]** KEY. THE ALARM SYMBOL "AL" DISAPPEARS FROM THE DISPLAY.
10. TO ACTIVATE THE ALARM AGAIN, REPEAT THE PROCEDURE OF "ALARM TIME SETTING" AS DESCRIBED.

IMPORTANT:

IF THE ALARM IS SET AS WAKE TO iPod, YOU WILL NEED TO CONNECT THE iPod/ iPhone PROPERLY AS DESCRIBED. OTHERWISE, THE BUZZER ALARM WILL SOUND AT THE SET TIME IF THE iPod HAS NOT BE CONNECTED.
 THE ALARM SET-UP MODE, WHERE THE SYMBOL "AL" IS FLASHING, WILL TIME-OUT IF THERE IS NO INPUT FOR 3 SECONDS AND RETURN TO "STANDBY MODE".
 SHOULD THE ALARM SET-UP MODE TIME-OUT, THE ALARM SYMBOL"AL" WILL NOT BE DISPLAYED AND THE ALARM TIME SETTING INSTRUCTIONS WILL HAVE TO BE REPEATED FOR THE ALARM TO BE SET.

SNOOZE FUNCTION

- WHENEVER THE ALARM COMES ON, IT CAN BE TEMPORARILY SUSPENDED FOR A SHORT PERIOD OF APPROXIMATELY 9 MINUTES, BY PRESSING THE "SNOOZE/ DIMMER" KEY ONCE.
- THE ALARM WILL THEN AUTOMATICALLY COME ON AGAIN AFTER THE APPROXIMATELY 9 MINUTES "SNOOZE" PERIOD HAS ENDED.
- THE PROCEDURE CAN BE REPEATED FOR APPROXIMATELY 90 MINUTES FROM ORIGINAL ALARM WAKE-UP TIME.

AUTOMATIC POWER OFF SLEEP FUNCTION

- THIS SET HAS A SPECIAL SLEEP TIMER FUNCTION WHICH CAN AUTOMATICALLY SWITCH OFF THE UNIT. THIS IS USEFUL FOR SLEEPING TO MUSIC AT NIGHT.
- AT ANY TIME WHILE THE UNIT IS OPERATING, PRESS & HOLD THE **[EQ/SLEEP]** KEY UNTIL THE "SL" SYMBOL FLASHING, THEN PRESS THE **[EQ/SLEEP]** KEY REPEATEDLY TO CHOOSE THE AUTOMATIC POWER OFF TIME.



(*OFF MEANS SLEEP TIMER IS DEACTIVATED)

ELECTRONIC VOLUME CONTROL

- THIS UNIT USES AN ELECTRONIC VOLUME CONTROL (PUSH BUTTON TYPE).
- TO INCREASE OR DECREASE THE LOUDNESS OF UNIT, PRESS THE VOLUME UP (VOL +) OR VOLUME DOWN (VOL -) KEYS RESPECTIVELY.
- RELEASE THE KEY WHEN VOLUME LEVEL IS AT THE DESIRED LOUDNESS.
- SOMETIMES, ESPECIALLY DURING LISTENING TO THE RADIO, YOU MAY NOTICE A "CLICK-CLICK-CLICK" (REPEATING) SOUND WHEN YOU ARE INCREASING OR DECREASING THE VOLUME. THIS IS A NORMAL CONDITION & THE SOUND WILL DISAPPEAR WHEN YOU RELEASE THE VOLUME KEY (WHEN YOU REACH THE DESIRED VOLUME LEVEL).

OPERATION OF RADIO

- PRESS THE "ON/ STANDBY" KEY ONCE TO SWITCH ON THE UNIT.
- PRESS THE **[FUNC./CL-SET]** KEY REPEATEDLY UNTIL THE DISPLAY SHOWS "FM".
- EXTEND AND ADJUST THE FM-WIRE ANTENNA TO OBTAIN THE BEST RECEPTION.

MANUAL FREQUENCY ADJUSTMENT (SCAN MODE)

- PRESS (AND IMMEDIATELY RELEASE) THE **[SKIP- /SEARCH-]** AND **[SKIP+ /SEARCH+]** KEYS TO "SCAN" (MANUALLY ADJUST) THE RADIO FREQUENCY "UP" OR "DOWN" BY 1-STEP AT A TIME.
- THE RADIO DIGITAL DISPLAY WILL INDICATE THE EXACT FREQUENCY AT EACH STEP'S POSITION.
- WHEN A DESIRED FREQUENCY OR STATION IS REACHED. IT CAN BE SAVED INTO ONE OF THE "MEMORY" POSITIONS. (SEE "RADIO MEMORY" SECTION).

AUTOMATIC FREQUENCY ADJUSTMENT (SEEK MODE)

- PRESS AND HOLD (FOR 2 SECONDS) THE **[SKIP- /SEARCH-]** AND **[SKIP+ /SEARCH+]** KEYS TO "SEEK" (AUTOMATICALLY ADJUST) THE RADIO FREQUENCY "UP" OR "DOWN" TO THE NEXT AVAILABLE RADIO STATION.
- THE RADIO DIGITAL DISPLAY WILL INDICATE THE EXACT FREQUENCY OF THE NEXT STATION THAT IS FOUND.
- WHEN A DESIRED STATION IS REACHED. IT CAN BE SAVED INTO ONE OF THE "MEMORY" POSITIONS. (SEE "RADIO MEMORY" SECTION).

RADIO MEMORY (STATION PRESET MEMORY STORAGE)

- AT ANY TIME, THE CURRENTLY DISPLAYED STATION OR FREQUENCY CAN BE STORED INTO ONE OF THE MEMORY POSITIONS.
- PRESS **[MEMORY]** KEY UNTIL "C01" FLASHES IN THE DISPLAY.
- PRESS **[SKIP- /SEARCH-]** AND **[SKIP+ /SEARCH+]** KEYS TO SELECT DESIRED MEMORY POSITION. (THERE ARE TOTAL 30 MEMORY POSITIONS).
- PRESS **[MEMORY]** KEY ONCE TO SAVE THE SELECTED STATION INTO THE SELECTED MEMORY POSITION.
- TO RECALL ANY SAVED MEMORY, SIMPLY PRESS **[MEMORY]** KEY ONCE THEN SELECT THE MEMORY POSITIONS BY PRESSING **[SKIP- /SEARCH-]** AND **[SKIP+ /SEARCH+]** KEYS THE SAVED RADIO-BAND WILL BE RECALLED.
- TO CLEAR THE MEMORY OF ANY POSITION, SIMPLY SAVE A NEW STATION TO THE SAME MEMORY POSITION.

 
OPERATION WITH THE iPod/ iPhone

- TURN ON BOTH THE UNIT AND THE iPod/ iPhone.
- CONNECT THE iPod/ iPhone TO THE UNIT AS DESCRIBED.
- PRESS THE [FUNC./ CL-SET] KEY REPEATEDLY UNTIL THE DISPLAY SHOWS "iPod".
- PRESS THE PLAY/ PAUSE [▶||] KEY ON THE UNIT, THEN THE FIRST SONG WILL START PLAYING.
- THE iPod/ iPhone DISPLAY WILL INDICATE THE INFORMATION OF THE CURRENT SONG.
- AT ANYTIME DURING PLAYBACK, PRESS THE [PLAY/PAUSE ▶||] KEY TO PAUSE PLAYBACK. PRESS [PLAY/PAUSE ▶||] KEY TO RESUME PLAYBACK OF THE SAME SONG & POSITION.
- AT ANYTIME DURING PLAYBACK, PRESS AND RELEASE THE [SKIP-/SEARCH-] OR [SKIP+/SEARCH+] KEYS TO SKIP FORWARD OR BACKWARDS BY ONE SONG, AS DESIRED.
- AT ANYTIME DURING PLAYBACK, PRESS AND HOLD THE [SKIP-/SEARCH-] OR [SKIP+/SEARCH+] KEYS TO FAST-FORWARD (CUE) OR FAST-REVERSE (REVIEW) THE SPECIFIC SONG, WHICH IS CURRENTLY PLAYING.
- YOU CAN OPERATE THE iPod/ iPhone USING EITHER THE UNIT'S BUTTONS, OR DIRECTLY WITH THE iPod/ iPhone ITSELF.
- WHEN THE iPod/ iPhone HAS BEEN CONNECTED WITH THE UNIT, IT WILL START CHARGING THE BATTERY OF THE iPod/ iPhone.
- NEVER REMOVE (OR UNPLUG) THE iPod/ iPhone FROM THE SET DURING PLAYBACK, ALWAYS PAUSE PLAYBACK FIRST AND THEN PRESS THE FUNC/ CL-SET KEY TO SWITCH TO ANOTHER SOURCE (EG. "RADIO") BEFORE REMOVING OR UNPLUGGING THE iPod/ iPhone, TO PREVENT DAMAGE TO YOUR SONG FILES OR MEMORY DEVICES.

"Made for iPod," "Made for iPhone," mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. **Please note that the use of this accessory with iPod, iPhone may affect wireless performance.**

MUSIC EQUALIZER

- AT ANYTIME DURING PLAYBACK, PRESS [EQ/SLEEP] KEY REPEATEDLY TO CHOOSE THE DESIRED SOUND EFFECT ACCORDING TO THE MUSIC YOU ARE LISTENING TO :




E-9

iPod STAND BOARD

THIS UNIT IS DESIGNED TO ALLOW YOU TO CONNECT AN iPod/ iPhone WITHOUT THE NEED FOR DOCK CONNECTORS. THE DESIGN OF THE UNIT HAS BEEN STRUCTURED TO PROVIDE SUPPORT TO THE CONNECTOR UNDER NORMAL USAGE WITHOUT EXCESSIVE PRESSURE ON THE iPod/ iPhone WHEN CONTROLLING PLAYBACK USING THE iPod/ iPhone SCREEN.

 - iPod STAND BOARD CAN BE ADJUSTED BY THE SLIDER WHICH LOCATED AT THE REAR OF UNIT.
- SIMPLY SLIDE UP AND DOWN AS DESIRED.

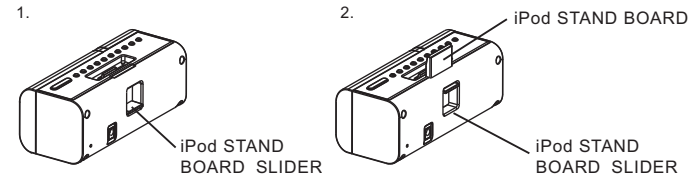

SPECIFICATIONS

- POWER SUPPLY : DC 7V, 2A THROUGH BUILT-IN DC JACK
EXTERNAL AC-DC POWER ADAPTOR 100V-240V ~ 50/60Hz
- BACK-UP BATTERY: UM-4"AAA"/LR03, 1.5Vx2 PCS
(BATTERIES NOT INCLUDED)
- POWER CONSUMPTION : 15 W
- SPEAKER : SPEAKER 2"
- FREQUENCY : FM 87.5 - 108 MHz

E-10

MODEL iP-3-AFP
ENGLISH MANUAL PLAN
MATERIAL: 80G WOODFREE PAPER
PRINTING COLOR: BLACK

FRONT VIEW

COVER	E-2	E-3
E-4	E-5	E-6

BACK VIEW

E-7	E-8	E-9
E-10	BLANK	BLANK