 


MODEL Z-255-AFPADi
 ENGLISH MANUAL
 SIZE: 102(W) x 136(H)MM
 MATERIAL: 80G WOODFREE PAPER
 PRINTING COLOR: BLACK

OPERATING INSTRUCTIONS

FINLUX

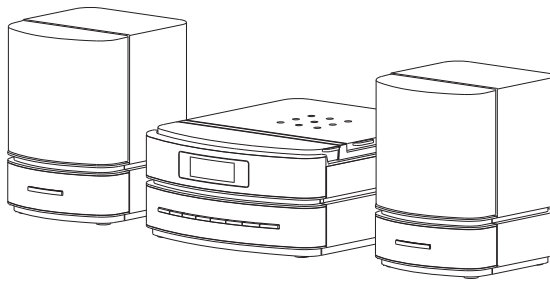

PLL
DIGITAL
TUNER

BLUE
BACKLIGHT
DISPLAY

CLOCK
QUARTZ
DIGITAL



DOCKING SYSTEM
DIGITAL MICRO HI-FI SYSTEM
MODEL: Z-255-AFPADi

Made for
 iPod iPhone iPad



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.

WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING LIQUIDS.

THE MAINS PLUG IS USED AS THE DISCONNECT DEVICE AND IT SHALL REMAIN READILY OPERABLE. TO COMPLETELY DISCONNECT THE POWER INPUT, THE MAINS PLUG OF THE APPARATUS MUST BE DISCONNECTED FROM THE MAINS COMPLETELY. THE MAINS PLUG SHOULD NOT BE OBSTRUCTED OR SHOULD BE EASILY ACCESSED DURING INTENDED USE.

PLEASE NOTE: YOU WILL FIND THE RATING LABEL FOR THIS PRODUCT LOCATED ON THE BOTTOM OF THE UNIT.



CAUTION

DO NOT EXPOSE TO DRIPPING OR SPLASHING LIQUIDS!

 
CAUTION: GROUNDING OR POLARIZATION. THE PRECAUTIONS SHOULD BE TAKEN SO THAT THE WIDER BLADE OF THE AC PLUG MUST MATCH THE SLOT IN RECEPTACLE "WALL SOCKET".

NOTE: CAUTION SYMBOLS ARE PRINTED ON REAR OF UNIT. PLEASE REFER TO INSTRUCTION MANUAL.

CAUTION: INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.
VORSICHT: UNSICHTBARE LASERSTRAHLUNG TRITT AUS, WENN DECKEL GEÖFFNET UND WENN SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT IST. NICHT DEM STRAHL AUSSETZEN!
WARNING: OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRR ÄR URKOPPLAND. STRÅLEN ÄR FARLIG.
ADVARSEL: USYNLIG LASERSTRÅLING VED ÅBNING. NÄR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDS/ETTELSE FOR STRÅLING.
ATTENZIONE: RADIONS LASER INVISIBILE. NON GUARDARE DIRETTAMENTE NELLA SORGENTE DEL LASER.
ACHTUNG: LASERLINSE NICHT BERÜHREN UNSICHTBARER LASERSTRAHL.
AVISO: A LENTE NUNCA DEVE SER TOCADA.




CLASS 1 LASER PRODUCT
 KLASSE 1 LASER PRODUKT
 LASER DE CLASSE
 LASER DI PRIMA CLASSE
 KLASSE 1 LASER
 LASER PRIMERA CLASE
 LASER CLASSE 1
 KLASSE 1 LASER PRODUKT

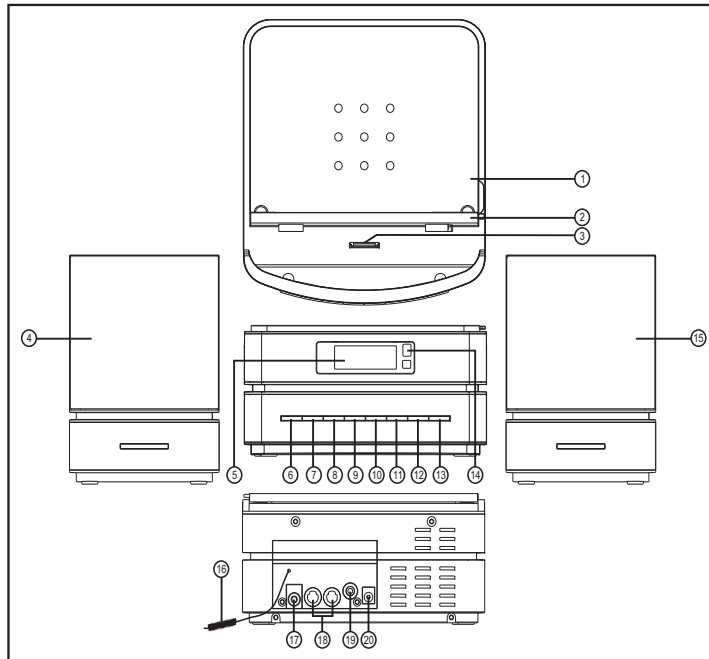

LOCATION OF CONTROLS

- | | |
|------------------------------|--|
| 1. CD DOOR | 11. FUNCTION KEY |
| 2. DOCKING DOOR | 12. VOLUME DOWN (-)/ MEM - KEY |
| 3. DOCKING ADAPTOR | 13. VOLUME UP (+)/ MEM + KEY |
| 4. SPEAKER (LEFT) | 14. REMOTE CONTROL SENSOR |
| 5. LCD DISPLAY | 15. SPEAKER (RIGHT) |
| 6. ON/ STANDBY KEY | 16. FM ANTENNA |
| 7. BACK/ TUNE DOWN KEY | 17. VIDEO OUT SOCKET |
| 8. NEXT/ TUNE UP KEY | 18. SPEAKER OUTPUT SOCKET (LEFT & RIGHT) |
| 9. STOP/ CLOCK SET KEY | 19. AUX IN SOCKET |
| 10. PLAY/ PAUSE/ FM MODE KEY | 20. DC JACK SOCKET |

 E-3

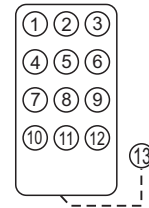


REMOTE CONTROL:

1. ON/ STANDBY KEY
2. EQ KEY
3. FUNCTION KEY
4. BACK/ TUNE DOWN KEY
5. PLAY/ PAUSE/ FM MODE KEY
6. NEXT/ TUNE UP KEY
7. REPEAT/ SLEEP KEY
8. STOP/ CLOCK SET KEY
9. VOLUME + / MEM + KEY
10. SNOOZE/ TIMER KEY
11. MEM/ PROG. KEY
12. VOLUME - / MEM - KEY
13. BATTERY COMPARTMENT

POWER SUPPLY

AC OPERATION (EXTERNAL AC-DC POWER ADAPTOR)

 - THIS SET IS EQUIPPED WITH A "DC-JACK" CAPABLE OF ACCEPTING AC-ADAPTORS WITH A RATING OF DC = 7V, 2.5A, AND WITH A PLUG WITH THE FOLLOWING POLARITIES AS SHOWN (CENTER POSITIVE):
- PLEASE USE ONLY THE SUPPLIED AC-ADAPTOR TO OPERATE THE UNIT. USE OF OTHER ADAPTORS MAY DAMAGE THE UNIT OR CAUSE IT TO MALFUNCTION.
- PLUG THE TAIL END OF THE AC-ADAPTOR INTO THE DC-JACK (SOCKET) ON THE UNDERNEATH OF THE MAIN UNIT.
- MAKE SURE THE VOLTAGE OF THE AC ADAPTOR OPERATES AT THE SAME VOLTAGE AS YOUR LOCAL HOUSEHOLD VOLTAGE.
- INSERT THE PLUG AT THE END OF THE POWER CORD INTO THE WALL AC SOCKET.
- PRESS THE "ON/ STANDBY" KEY TO SWITCH ON THE UNIT.
- THIS UNIT IS DESIGNED TO OPERATE WITHOUT EVER BEING TOTALLY POWERED "OFF". IT WILL EITHER BE "ON" OR IN "STANDBY MODE".
- IN STANDBY MODE, THE BLUE BACK-LIGHT OF THE DIGITAL DISPLAY WILL BE DIMMED BUT THE DISPLAY WILL SHOW THE CURRENT TIME (CLOCK FUNCTION).
- ANYTIME DURING STANDBY MODE, YOU CAN SWITCH "ON" THE UNIT BY PRESSING THE "ON/ STANDBY" KEY (ON REMOTE CONTROL OR FRONT PANEL OF THE MAIN UNIT).
- SAVE ENERGY BY SWITCHING THE SYSTEM TO "STANDBY" MODE.



IMPORTANT : HOW TO TELL IF POWER IS "ON" ?

WHEN THE POWER IS "ON" THE ENTIRE DIGITAL DISPLAY WILL LIGHT UP WITH A "BLUE" BACK-LIGHT. THIS INDICATES THE HI-FI IS SWITCHED "ON".

PREPARATION OF REMOTE CONTROL

- THE REMOTE CONTROL UNIT CAN BE FOUND THE BATTERY COMPARTMENT UNDER THE UNIT.
- REMOVE (GENTLY PULL OUT) THE PLASTIC "TAB" FROM THE BATTERY COMPARTMENT AT THE REAR OF THE REMOTE CONTROL.
- TEST THE REMOTE CONTROL BY PRESSING THE ON/ STANDBY KEY TO CHECK THAT THE UNIT SWITCHES ON PROPERLY USING THE REMOTE CONTROL.

CONNECTION OF SPEAKER BOXES

 
- UNWRAP THE SPEAKER-CORDS OF BOTH SPEAKER-BOXES AND INSERT THE LEFT/RIGHT PLUGS INTO SOCKETS IN THE REAR OF MAIN UNIT.
- PLACE THE SPEAKER BOXES AS FAR APART AS POSSIBLE FOR BEST SOUND EFFECT.

E-4

DIGITAL CLOCK FUNCTION

- THE SET HAS A BUILT-IN DIGITAL CLOCK, WHICH IS DISPLAYED WHEN THE SET IS IN "STANDBY MODE". (THE DISPLAY WILL CONTINUOUSLY SHOW THE CURRENT TIME). IN THIS SITUATION THE BLUE BACKLIGHT IS NORMALLY DIMMED (TO SAVE ELECTRICITY).

HOW TO SET CORRECT TIME:

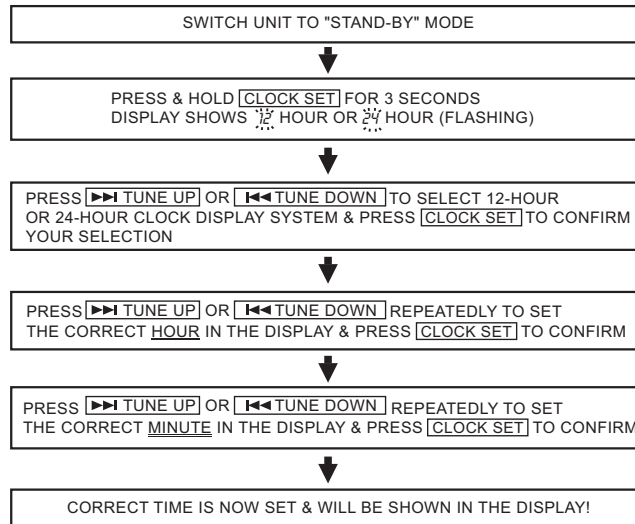

*NOTE:
THAT WHEN THE DIGITAL CLOCK IS NOT SET, THE DIGITAL CLOCK DISPLAY SHALL CONTINUOUSLY FLASH TO INDICATE THAT THE CORRECT TIME HAS NOT YET BEEN SET.

AUTOMATIC POWER ON/OFF TIMER FUNCTION

- THIS SET HAS A TIMER FUNCTION TO ENABLE YOU TO PROGRAM THE UNIT TO AUTOMATICALLY SWITCH "ON" OR "OFF" AT PRESET TIMES. THIS IS USEFUL AS A MORNING ALARM CLOCK :

HOW TO SET TIMER

- ON "STANDBY" MODE, PRESS AND HOLD [TIMER] KEY (ON REMOTE CONTROL). THE "TIMER ON" SYMBOL APPEARS IN THE DISPLAY.
- PRESS [TUNE UP] OR [TUNE DOWN] TO ADJUST THE HOUR OF THE DESIRED "ON" TIME AND THEN PRESS [TIMER] KEY TO CONFIRM.
- PRESS [TUNE UP] OR [TUNE DOWN] TO ADJUST THE MINUTES OF THE DESIRED "ON" TIME AND THEN PRESS [TIMER] TO CONFIRM.
- NOW THE WORDING IN THE DISPLAY CHANGES TO SHOW "TIMER OFF".
- PRESS [TUNE UP] OR [TUNE DOWN] KEYS TO ADJUST THE HOUR OF THE DESIRED "OFF" TIME AND THEN PRESS [TIMER] TO CONFIRM.
- PRESS [TUNE UP] OR [TUNE DOWN] TO ADJUST THE MINUTES OF THE DESIRED "OFF" TIME AND THEN PRESS [TIMER] TO CONFIRM.
- NOW THE DISPLAY WILL INDICATE THE "WAKE UP MODE" (iPod/ iPhone/ iPad, RADIO or CD). PRESS [TUNE UP] TO CHOOSE THE DESIRED MODE & PRESS [TIMER] TO CONFIRM.
- THE DISPLAY THEN SHOWS THE "WAKE UP VOLUME LEVEL" (LOUDNESS). PRESS [TUNE UP] OR [TUNE DOWN] TO DECREASE OR INCREASE THE VOLUME LEVEL TO BE USED FOR THE MUSIC TO BE PLAYED WHEN THE TIMER SWITCHES ON THE UNIT AT THE PRE-SET TIME.
- PRESS [TIMER] TO CONFIRM.
- FINALLY THE UNIT WILL RETURN TO THE NORMAL DISPLAY, EXCEPT THAT THE ☉ SYMBOL WILL BE SHOWN, TO INDICATE THAT YOU HAVE PROGRAMMED A ON/OFF ALARM SETTING.
- IN CASE YOU WISH TO DISABLE THE TIMER, PRESS THE [TIMER] KEY ONCE, & THE ☉ SYMBOL WILL DISAPPEARS.

(NOTE : THE AUTOMATIC ON/OFF TIMER WILL SWITCH ON THE UNIT AS IF YOU HAVE MANUALLY PRESSED THE "ON/ STANDBY" KEY. IF YOU HAVE SELECTED "WAKE TO RADIO", THE EXACT PRESET RADIO BAND & STATION WILL BECOME ACTIVATED WHEN POWER SWITCHES ON).

AUTOMATIC POWER OFF SLEEP FUNCTION

- THIS SET HAS A SPECIAL SLEEP TIMER FUNCTION WHICH CAN AUTOMATICALLY SWITCH OFF THE UNIT. THIS IS USEFUL FOR SLEEPING TO MUSIC AT NIGHT.
- AT ANY TIME WHILE THE UNIT IS OPERATING, PRESS & HOLD THE SLEEP KEY UNTIL THE "ZZZ" ICON & "SLEEP ..." TEXT ARE DISPLAYED. PRESS [SLEEP] KEY (ON REMOTE CONTROL) REPEATEDLY TO CHOOSE THE AUTOMATIC POWER OFF TIME.



(*OFF MEANS SLEEP TIMER IS DEACTIVATED)

ELECTRONIC VOLUME CONTROL

- THIS UNIT USES AN ELECTRONIC VOLUME CONTROL (PUSH BUTTON TYPE).
- TO INCREASE OR DECREASE THE LOUDNESS OF UNIT, PRESS THE VOLUME UP (VOL +) OR VOLUME DOWN (VOL -) KEYS RESPECTIVELY.
- RELEASE THE KEY WHEN VOLUME LEVEL IS AT THE DESIRED LOUDNESS.
- SOMETIMES, ESPECIALLY DURING LISTENING TO THE RADIO, YOU MAY NOTICE A "CLICK-CLICK-CLICK" (REPEATING) SOUND WHEN YOU ARE INCREASING OR DECREASING THE VOLUME. THIS IS A NORMAL CONDITION & THE SOUND WILL DISAPPEAR WHEN YOU RELEASE THE VOLUME KEY (WHEN YOU REACH THE DESIRED VOLUME LEVEL).

OPERATION OF RADIO

- PRESS THE "ON/STANDBY" KEY ONCE TO SWITCH ON THE UNIT.
- PRESS THE **[FUNCTION]** KEY REPEATEDLY UNTIL THE DISPLAY SHOWS THE RADIO FREQUENCY.
- TO IMPROVE FM-RADIO RECEPTION, FULLY EXTEND THE FM-ANTENNA WIRE AND ADJUST IT'S POSITION.
- USE THE **[FM MODE]** KEY TO SELECT THE DESIRED MODE (FM MONO/STEREO). IN SOME CASES, WHERE RECEPTION IS POOR, IT MAY BE ADVISABLE TO SELECT "MONO" MODE, TO IMPROVE CLARITY OF THE RADIO SIGNAL.

MANUAL FREQUENCY ADJUSTMENT (SCAN MODE)

- PRESS (AND IMMEDIATELY RELEASE) THE **[▶▶TUNE UP]** OR **[◀◀TUNE DOWN]** KEYS TO "SCAN" (MANUALLY ADJUST) THE RADIO FREQUENCY "UP" OR "DOWN" BY 1-STEP AT A TIME.
- THE RADIO DIGITAL DISPLAY WILL INDICATE THE EXACT FREQUENCY AT EACH STEP'S POSITION.
- WHEN A DESIRED FREQUENCY OR STATION IS REACHED. IT CAN BE SAVED INTO ONE OF THE "MEMORY" POSITIONS. (SEE "RADIO MEMORY" SECTION).

AUTOMATIC FREQUENCY ADJUSTMENT (SEEK MODE)

- PRESS AND HOLD (FOR 2 SECONDS) THE **[▶▶TUNE UP]** OR **[◀◀TUNE DOWN]** KEYS TO "SEEK" (AUTOMATICALLY ADJUST) THE RADIO FREQUENCY "UP" OR "DOWN" TO THE NEXT AVAILABLE RADIO STATION.
- THE RADIO DIGITAL DISPLAY WILL INDICATE THE EXACT FREQUENCY OF THE NEXT STATION THAT IS FOUND.
- WHEN A DESIRED STATION IS REACHED. IT CAN BE SAVED INTO ONE OF THE "MEMORY" POSITIONS. (SEE "RADIO MEMORY" SECTION).

RADIO MEMORY (STATION PRESET MEMORY STORAGE)

- AT ANY TIME, THE CURRENTLY DISPLAYED STATION OR FREQUENCY CAN BE STORED INTO ONE OF THE MEMORY POSITION.
- PRESS **[MEM/PROG]** KEY (ON REMOTE CONTROL) ONCE.
- PRESS THE **[MEM +]** OR **[MEM -]** KEY TO SELECT THE DESIRED MEMORY POSITION TO SAVE THE RADIO STATION.
- PRESS **[MEM/PROG]** KEY ONCE TO SAVE THE SELECTED STATION INTO THE SELECTED MEMORY POSITION.
- TO RECALL A STATION IN MEMORY, PRESS & HOLD **[FUNCTION]** FOR 3 SECONDS, PRESS **[MEM +]** OR **[MEM -]** KEY TO SELECT DESIRED MEMORY STATION. (THERE ARE 30 MEMORY POSITIONS FOR FM BAND). THEN PRESS THE FUNCTION KEY AGAIN TO HAVE THE KEYS CONTROL THE VOLUME OF THE UNIT ONCE AGAIN.
- TO CLEAR THE MEMORY OF ANY POSITION, SIMPLY SAVE A NEW STATION TO THE SAME MEMORY POSITION.

E-7

OPERATION WITH THE iPod/ iPhone/ iPad


THIS UNIT IS DESIGNED TO ALLOW YOU TO CONNECT AN iPod/ iPhone/ iPad WITHOUT THE NEED FOR DOCK CONNECTORS. THE DESIGN OF THE UNIT HAS BEEN STRUCTURED TO PROVIDE SUPPORT TO TE CONNECTOR UNDER NORMAL USAGE WITHOUT EXCESSIVE PRESSURE ON THE iPod/ iPhone/ iPad WHEN CONTROLLING PLAYBACK USING THE iPod/ iPhone/ iPad SCREEN.


- TURN ON BOTH THE UNIT AND THE iPod/ iPhone/ iPad.
- PRESS THE **[FUNCTION]** KEY REPEATEDLY UNTIL THE DISPLAY SHOWS "iPod".
- THE UNIT WILL AUTOMATICALLY START PLAYBACK OF THE SONGS.
- THE iPod/ iPhone/ iPad DISPLAY WILL INDICATE THE INFORMATION OF THE CURRENT SONG (TRACK).
- AT ANYTIME DURING PLAYBACK, PRESS THE **[▶||PLAY/PAUSE]** KEY TO PAUSE OPERATION OF THE UNIT, PRESS **[▶||PLAY/PAUSE]** KEY TO RESUME OPERATION AT THE SAME TRACK & POSITION.
- AT ANYTIME DURING PLAYBACK, PRESS & HOLD THE **[▶||PLAY/PAUSE]** KEY TO STOP PLAYBACK OF UNIT.
- AT ANYTIME DURING PLAYBACK, PRESS AND RELEASE THE **[▶▶TUNE UP]** OR **[◀◀TUNE DOWN]** KEYS TO SKIP FORWARD OR BACKWARDS BY ONE TRACK, AS DESIRED.
- ANY ANYTIME DURING PLAYBACK, PRESS AND HOLD THE **[▶▶TUNE UP]** OR **[◀◀TUNE DOWN]** KEYS ON UNIT TO FAST-FORWARD (CUE) OR FAST-REVERSE (REVIEW) THE SPECIFIC TRACK, WHICH IS CURRENTLY PLAYING.
- YOU CAN OPERATE THE iPod/ iPhone/ iPad USING EITHER THE SET, REMOTE CONTROL OR DIRECTLY WITH THE iPod/ iPhone/ iPad ITSELF.
- WHEN THE iPod/ iPhone/ iPad HAS BEEN CONNECTED WITH THE UNIT, IT WILL START CHARGING THE BATTERY OF THE iPod/ iPhone/ iPad.
- NEVER REMOVE (OR UNPLUG) THE iPod/ iPhone/ iPad FROM THE SET DURING PLAYBACK, ALWAYS PRESS & HOLD FOR 2 SECONDS THE **[▶||PLAY/PAUSE]** KEY FIRST AND THEN PRESS THE **[FUNCTION]** KEY TO SWITCH TO ANOTHER SOURCE (EG. "RADIO" OR "AUX") BEFORE REMOVING OR UNPLUGGING THE iPod/ iPhone/ iPad, TO PREVENT DAMAGE TO YOUR SONG FILES OR MEMORY DEVICES.

"Made for iPod," "Made for iPhone," and "Made for iPad," mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. **Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.**

REPEAT PLAYBACK FUNCTION (iPod/ iPhone/ iPad)

- AT ANYTIME DURING iPod/ iPhone/ iPad PLAYBACK:
- PRESS THE **[REPEAT]** KEY ON REMOTE CONTROL OR PRESS THE FOLLOWING SYMBOLS ON THE iPod/ iPhone/ iPad SCREEN:

 = TO REPEAT THE CURRENT TRACK

 = TO REPEAT ALL TRACKS

E-8

SHUFFLE (RANDOM) PLAYBACK FUNCTION (iPod/ iPhone/ iPad)

- THIS UNIT IS ABLE TO SHUFFLE ALL SONGS ON AN iPod/ iPhone/ iPad AND PLAY THEM BACK IN "RANDOM" ORDER.
- TO ACTIVATE THIS FUNCTION, SELECT THE SHUFFLE ICON "↻"
- (ON THE iPod/ iPhone/ iPad).
- THE "SHUFFLE" SYMBOL WILL BE DISPLAYED ON THE iPod/ iPhone/ iPad SCREEN & THE SONGS WILL BE PLAYED IN RANDOM ORDER.

VIDEO OUT (iPod/ iPhone/ iPad)

- YOU CAN CONNECT THE iPod/ iPhone/ iPad VIDEO OUT SOCKETS TO THE VIDEO INPUT TERMINAL OF YOUR TV TO WATCH VIDEO PROGRAMS ON YOUR iPod/ iPhone/ iPad ON YOUR TV SCREEN.

INSERTION & REMOVAL OF DISCS

- WHEN OPENING THE CD-DOOR, ALWAYS ENSURE THE DISC IS NOT IN MOTION (NOT SPINNING) WHEN YOU OPEN THE CD-DOOR. ALWAYS PRESS [STOP] KEY TO STOP THE DISC SPINNING FIRST.
- PLACE A CD INTO THE COMPARTMENT WITH THE LABEL-SIDE (PRINTED SIDE OF DISC) FACING UPWARDS. PRESS DOWN IN THE CENTER PART OF DISC UNTIL THE DISC "LOCKS" ONTO THE CENTER SPINDLE.
- WHEN THE CD HAS BEEN PLACED ONTO THE CENTER SPINDLE, GENTLY LOWER THE CD-DOOR DOWNWARDS UNTIL IT LOCKS SHUT.
- THE CD IS NOW READY TO BE PLAYED.
- TO REMOVE A DISC, FOLLOW THE SAME PROCEDURE AS DESCRIBED ABOVE, EXCEPT TO REMOVE THE CD INSTEAD OF INSERTING IT INTO THE COMPARTMENT, BY PLACING ONE FINGER AT THE MIDDLE OF DISC (CENTER SPINDLE) & THE OTHER AT THE EDGE OF THE DISC & GENTLY PULLING UPWARDS.
- IMPORTANT : ALWAYS HOLD A CD BY ITS EDGES. AVOID GETTING ANY FINGER PRINTS, SMUDGES OR DIRT ONTO THE SURFACE OF A DISC. IN CASE THIS HAPPENS, USE A SPECIAL CD-CLEANING CLOTH OR CLEANING KIT TO REMOVE THE DIRT OR SMUDGES.

NORMAL CD OPERATION

- TURN THE UNIT ON BY PRESS THE [STANDBY/ON] KEY.
- INSERT A CD AS DESCRIBED.
- PRESS THE [FUNCTION] KEY UNTIL DISPLAY SHOW "CD".
- THE CD WILL SPIN MOMENTARILY AND THE DISPLAY SHOW THE TOTAL NUMBER OF TRACKS (SONG) OF THE DISC.
- PRESS THE [PLAY/PAUSE] KEY, THE FIRST TRACK (SONG) WILL START PLAYING. THE DISPLAY WILL INDICATE THE CURRENT TRACK NO. ("01" IF IT IS THE FIRST TRACK).

E-9

- AT ANYTIME DURING PLAYBACK, PRESS THE [PLAY/PAUSE] KEY TO PAUSE OPERATION OF THE UNIT. PRESS THE [PLAY/PAUSE] KEY AGAIN TO RESUME OPERATION AT THE SAME TRACK & POSITION.
- AT ANYTIME DURING PLAYBACK, PRESS THE [STOP] KEY TO STOP OPERATION OF THE SET. THIS WILL RESET THE CD PLAYER TO THE FIRST TRACK (IF YOU PRESS PLAY AFTER STOP, THE FIRST TRACK WILL ALWAYS START PLAYING).
- AT ANYTIME DURING PLAYBACK, "PRESS AND RELEASE" THE [TUNE DOWN] OR [TUNE UP] KEYS TO SKIP BACKWARDS OR FORWARDS BY ONE TRACK, AS DESIRED.
- AT ANYTIME DURING PLAYBACK, "PRESS AND HOLD" THE [TUNE DOWN] OR [TUNE UP] KEYS TO FAST-REVERSE (REVIEW) OR FAST-FORWARD (CUE) THE SPECIFIC TRACK, WHICH IS CURRENTLY PLAYING.

PROGRAM FUNCTION

- THE CD PLAYER CAN BE PROGRAMMED TO PLAY ANY SEQUENCE OF UP TO 20 TRACKS FOR AUDIO-CD, AS DESIRED.
- ALWAYS PRESS THE [STOP] KEY BEFORE STARTING THE PROGRAMMING.
- PRESS THE [MEM/PROG] KEY, THE DISPLAY WILL SHOW "01" AND THE "MEM" SYMBOL WILL FLASH, TO INDICATE THAT THE SET IS NOW IN "MEMORY PROGRAMMING MODE", AT THE FIRST MEMORY POSITION.
- PRESS THE [TUNE UP] OR [TUNE DOWN] KEYS TO SELECT THE TRACK (SONG) NUMBER YOU WISH TO BE STORED IN THE FIRST MEMORY (PROGRAM) POSITION, AND PRESS THE [MEM/PROG] KEY (ON REMOTE CONTROL) TO CONFIRM YOUR SELECTION.
- WHEN YOU PRESS THE [MEM/PROG] KEY THE DISPLAY WILL ADVANCE TO THE NEXT MEMORY POSITION (eg. "02").
- REPEAT THE PREVIOUS 2 STEPS, EACH TIME SELECTING ANY TRACK NUMBER OF YOUR CHOICE TO BE STORED IN THE SUCCESSIVE MEMORY (PROGRAM) POSITIONS.
- AFTER EACH TRACK NUMBER, REMEMBER TO PRESS THE [MEM/PROG] KEY.
- AFTER A MAXIMUM OF SONGS (OR LESS) HAVE BEEN SELECTED AS DESCRIBED ABOVE.
- ALSO, THE "MEM" SYMBOL WILL REMAIN "ON" TO INDICATE THAT YOU HAVE SAVED A PROGRAM-MEMORY (SEQUENCE).
- PRESSING [PLAY/PAUSE] WILL NOW PLAY BACK THE "SAVED SEQUENCE" IN THE PROGRAM MEMORY.
- TO CLEAR (CANCEL) THE ENTIRE PROGRAM WHICH IS STORED IN THE MEMORY, SIMPLY PRESS [STOP] TWICE, OR SWITCH "OFF" THE SET.

MUSIC EQUALIZER

- ANYTIME DURING PLAYBACK, PRESS THE [EQ] KEY (ON REMOTE CONTROL) REPEATEDLY TO CHOOSE THE DESIRED SOUND EFFECT ACCORDING TO THE MUSIC YOU ARE LISTENING TO :



E-10

PLAY MODE FUNCTION

- AT ANYTIME DURING PLAYBACK:
- PRESS **[REPEAT]** KEY REPEATEDLY TO SELECT THE FOLLOWING OPTIONS:
 1. REPEAT: TO REPEAT THE CURRENT TRACK (DISPLAY SHOWS "↺↻")
 2. REPEAT ALL: TO REPEAT ALL TRACK (DISPLAY SHOWS "↺↻ ALL")

USING THE AUDIO LINE IN CONNECTION (AUX-INPUT)

- YOU CAN CONNECT THE AUDIO OUTPUT OF AN EXTERNAL DEVICE SUCH AS A MP3 PLAYER OR A TV TO THIS UNIT, TO LISTEN TO THE SOUND OF THAT DEVICE THROUGH THE HIGH QUALITY AMPLIFIER OF THIS MUSIC SYSTEM.
- TO CONNECT THE EXTERNAL DEVICE PLEASE USE A STANDARD STEREO HEADPHONE (3.5MM TO 3.5MM PLUGS) CABLE TO CONNECT THE "HEADPHONE-OUT OR AUDIO LINE-OUT" OF THE DEVICE TO THE AUX-INPUT SOCKET OF THIS UNIT.
- PRESS THE **[FUNCTION]** KEY TO "AUX".
- SWITCH ON THE UNIT AND THE EXTERNAL DEVICE (eg. MP3-PLAYER OR TV).
- START PLAYBACK OF THE EXTERNAL DEVICE AND ADJUST THE VOLUME CONTROL OF THE MAIN UNIT TO THE DESIRED LEVEL.
- REMEMBER TO SWITCH OFF THE UNIT WHEN YOU ARE FINISHED USING THE EXTERNAL DEVICE.

SPECIFICATIONS

POWER SUPPLY : DC 7V, 2.5A THROUGH BUILT-IN DC JACK
EXTERNAL AC-DC POWER ADAPTOR 100V-240V ~ 50/60Hz
SPEAKER : 3" x 2
FREQUENCY : FM 87.5 - 108 MHz

THE APPARATUS SHOULD NOT BE EXPOSED TO DRIPPING OR SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS SHOULD BE PLACED ON THE APPARATUS.

THE MARKING AND RATING LABEL IS LOCATED AT REAR ENCLOSURE OF THE APPARATUS.

THE MAINS PLUG IS USED AS THE DISCONNECT DEVICE AND IT SHALL REMAIN READILY OPERABLE. TO BE COMPLETELY DISCONNECTED THE POWER INPUT, THE MAINS PLUG OF THE APPARATUS SHALL BE DISCONNECTED FROM THE MAINS COMPLETELY. THE MAINS PLUG SHOULD NOT BE OBSTRUCTED OR SHOULD BE EASILY ACCESSED DURING INTENDED USE.

UNDER THE INFLUENCE OF ELECTROSTATIC PHENOMENON, THE PRODUCT MAY MALFUNCTION AND USER TO POWER RESET.

EXCESSIVE SOUND PRESSURE FROM EARPHONES AND HEADPHONES CAN CAUSE HEARING LOSS.

BATTERY SHOULD NOT BE EXPOSED TO EXCESSIVE HEAT SUCH AS SUNSHINE, FIRE OR THE LIKE.

ELECTROSTATIC DISCHARGE (ESD) PRECAUTION

WHEN ELECTROSTATIC DISCHARGE (ESD) OCCURS AT THE FRONT SURFACE (WHETHER METAL OR PLASTIC) OR NEAR ANY PART OR ANY BUTTON OF THIS UNIT, OR AT THE USB PORT AND/ OR SD-CARD SLOTS (IF THEY EXIST ON THIS PRODUCT), THERE MAY BE A POSSIBILITY THAT THE PRODUCT MAY STOP OPERATION AND/ OR SHUT DOWN IMMEDIATELY. THIS IS A NORMAL CONDITION AND INTENDED TO PROTECT THE UNIT AND INTERNAL COMPONENTS AGAINST DAMAGE.

IN SUCH A CASE, PLEASE RESET THE UNIT (BY DISCONNECTING AND RECONNECTING AC-POWER SOURCE) TO REVERT THE UNIT TO NORMAL OPERATION.

CAUTION

DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

MODEL Z-255-AFPADi
ENGLISH MANUAL PLAN
MATERIAL: 80G WOODFREE PAPER
PRINTING COLOR: BLACK

FRONT VIEW

COVER	E-2	E-3
E-4	E-5	E-6

BACK VIEW

E-7	E-8	E-9
E-10	E-11	E-12